 


502r

The 502r transmitter is designed for use as a trigger for the 500r+ system. The transmitter comprises a plastic waterproof case that can either be worn on a strap round the wrist, round the neck as a pendant, or clipped to a pocket. The aerial is inside the case, and the unit is powered by a long life lithium battery.

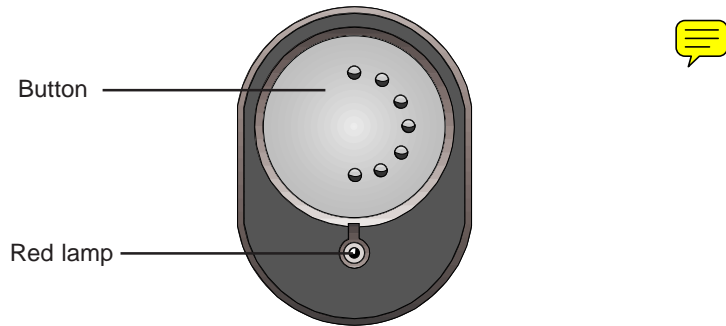 


Operation

To use the transmitter press the large orange button. The unit sends a signal to the 500r+ and briefly lights the small red lamp to show that it is working. If you hold the button down, the transmitter continuously repeats the signal .

Fitting The Pocket Clip


1. Squeeze the top of the clip to open it.
2. Put the bottom lip of the clip in the lower attachment slot.
3. Push the lugs at the top of the clip over the groove at the top of the Transmitter.
4. Slide the Transmitter up the clip until it clicks home.

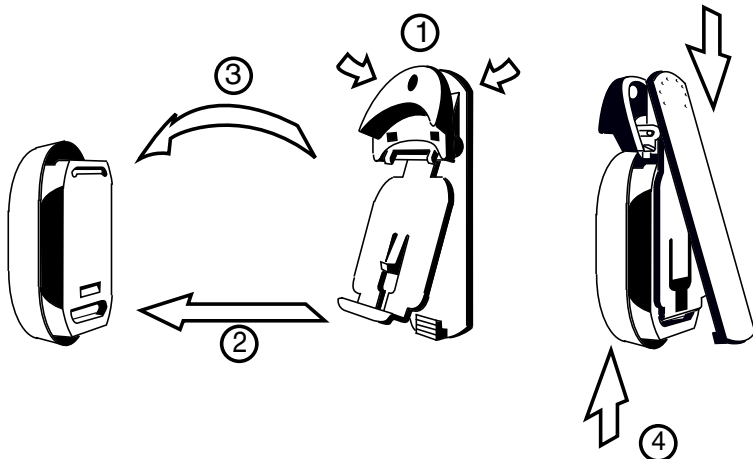

WARNING This product contains a Lithium battery. Do not destroy in a fire. Do not attempt to open the unit. Do not crush or puncture. Do not expose to temperatures above 60°C. Contact your local authority for disposal procedure.

502r

 The 502r transmitter is designed for use as a trigger for the 500r+ system. The transmitter comprises a plastic waterproof case that can either be worn on a strap round the wrist, round the neck as a pendant, or clipped to a pocket. The aerial is inside the case, and the unit is powered by a long life lithium battery.

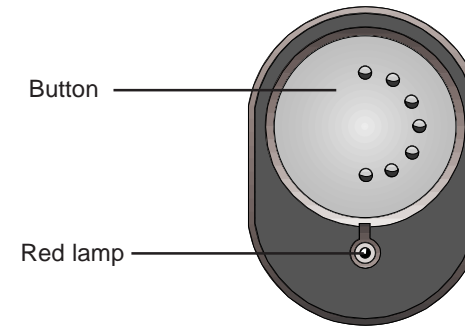


Operation

To use the transmitter press the large orange button. The unit sends a signal to the 500r+ and briefly lights the small red lamp to show that it is working. If you hold the button down, the transmitter continuously repeats the signal .

Fitting The Pocket Clip

 
1. Squeeze the top of the clip to open it.
2. Put the bottom lip of the clip in the lower attachment slot.
3. Push the lugs at the top of the clip over the groove at the top of the Transmitter.
4. Slide the Transmitter up the clip until it clicks home.

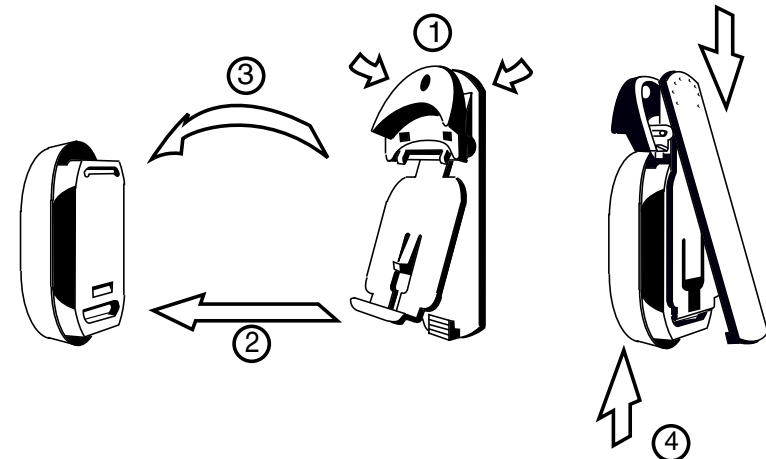

WARNING This product contains a Lithium battery. Do not destroy in a fire. Do not attempt to open the unit. Do not crush or puncture. Do not expose to temperatures above 60°C. Contact your local authority for disposal procedure.


Fitting the Pendant

 1. Fit the bottom of the pendant attachment into the lower attachment slot.
2. Push the lugs at the top of the pendant attachment over the groove at the top of the transmitter.
3. Slide the transmitter up the pendant attachment until it clicks home.

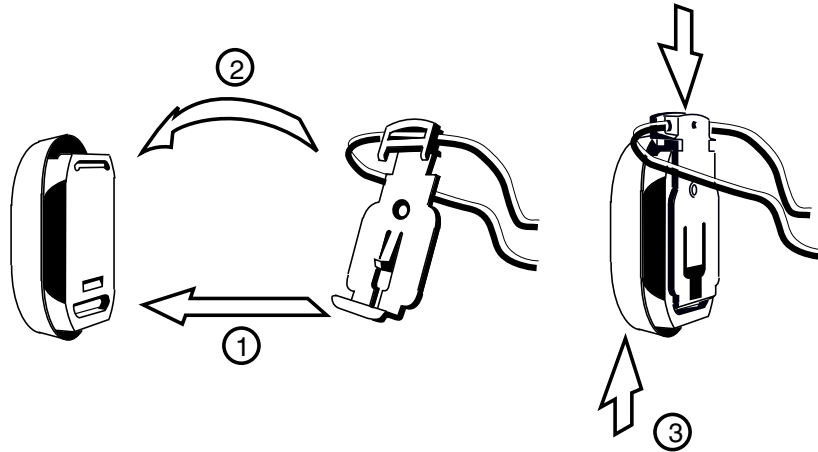

Fitting the Wrist Strap

 Thread the elasticated wrist strap in and out of the attachment slots as shown in the diagram.

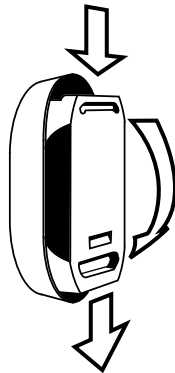


Setting Up

Each 502r contains a unique identity code that it transmits every time you press the orange button. You must set your 500r+ up to recognise this code in order to make sure that the system responds to your own transmitter and no-one else's. Read "Programming - Learning Detectors" in the 500r+ Installer's Guide for instructions on how to do this. You do not have to set any switches within the transmitter. Each unit is programmed with a unique identity code in the factory.

NOTE: You must check that the range of the pendant is suitable for the application.


Fitting the Pendant

 1. Fit the bottom of the pendant attachment into the lower attachment slot.
2. Push the lugs at the top of the pendant attachment over the groove at the top of the transmitter.
3. Slide the transmitter up the pendant attachment until it clicks home.

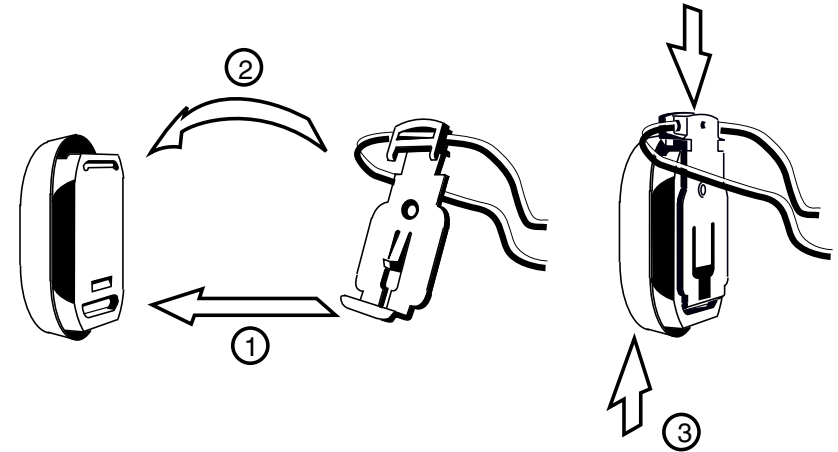

Fitting the Wrist Strap

 Thread the elasticated wrist strap in and out of the attachment slots as shown in the diagram.

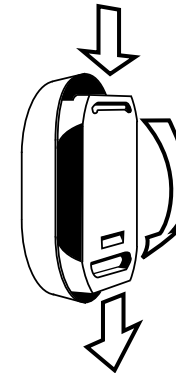

Setting Up

Each 502r contains a unique identity code that it transmits every time you press the orange button. You must set your 500r+ up to recognise this code in order to make sure that the system responds to your own transmitter and no-one else's. Read "Programming - Learning Detectors" in the 500r+ Installer's Guide for instructions on how to do this. You do not have to set any switches within the transmitter. Each unit is programmed with a unique identity code in the factory.

NOTE: You must check that the range of the pendant is suitable for the application.